

# 25mm/35mm Alluminium Venetians Installation Guide

Buy  
My  
Blinds  
Online.co.za

## Outside Fitting


### Before You Start

Unpack the alluminium venetian blind/s being very careful not to damage the blind/s or cords when cutting through the packaging. Unwrap the plastic that wraps the blind slats together. Included with your blind/s are the following parts: L-Shaped Universal brackets, Gold Screws, Fischer Plugs.


### Step 1

Look inside the headrail to make yourself familiar with the inner components, these components make sure the blind is in perfect working order - we need to make sure that the brackets do not interfere with these components. Hold the blind up in the window to see where one should drill to install the brackets - normally 150mm from the left, and 150mm from the right.

**We are installing you blind to the front side of the wall - so measure up 50mm.**

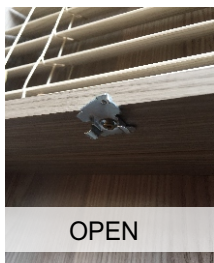

OPEN

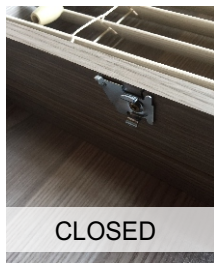

CLOSED

### Step 2

Place your bracket front side flush with the front side of the wall - this allows the blind to be installed nice and flush - you may however install your blind higher than 50mm from the edge if you wish - just make sure you allowed the extra when you did your measurements. Use a pencil and mark where to drill. Please note that blinds wider than 1200mm will need support bracket/s in the middle.

### Step 3

Use a 6mm drill bit and drill where you marked with the pencil.

### Step 4

With the holes now being drilled, insert the Fischer plugs. Insert the gold screw through the hole of the bracket and fix the bracket to the wall by using a phillips screw driver. TIP: its always better to use electric/cord drills for this step. Make sure that the screw is not nice and tight.

### Step 5

Have all your brackets in the open position as per above image. Place your blind over the brackets, push blind up and secure flush with the top recess of your wall. Now while holding your blind up with one hand, use the other hand to close your brackets one by one. Before letting go of your blind, test that the blind is nice and secure.



Above: Bracket in open position



Above: Bracket closed and blind is fixed

### Step 6

With the blind now secured and fixed, lets operate the blind. Take all the cords and gently pull to the opposite site of your control. You will hear a small click, this is the cord lock being released. Now with your hand still in position, slowly let go of the cord. Please note the moment you move your hand back to the side of your control, your blind will lock.

### Step 7

With the blind slats down, use the plastic operating wand to tiltz your slats by turning it clockwise and anti clockwise. Please do not pull on this.



Above: Perfectly installed 25/35mm venetian

### Step 8

Congratulate yourself! you have now installed your own blind, with the above steps you now have a premium custom made blind with a full 2 year warranty. Now tell your friends about us, and we will be waiting for your next order.

Thank you

Team BuyMyBlindsOnline.co.za  
011 868 1546

*part of the GalaxyBlinds group*