

50mm Aluminium Venetians Installation Guide

Outside Fitting

Before You Start

Unpack the Wooden venetian blind/s being very careful not to damage the blind/s or cords when cutting through the packaging. Unwrap the plastic that wraps the blind slats together. Included with your blind/s are the following parts: Universal brackets, Gold Screws, Fischer Plugs, Blind Cleaner.


Step 1

Look inside the headrail to make yourself familiar with the inner components, these components make sure the blind is in perfect working order - we need to make sure that the brackets do not interfere with these components. Hold the blind up in the window to see where one should drill to install the brackets - normally 150mm from the left, and 150mm from the right. **We are installing your blind on the outside/front of your wall - please measure up 50mm.**



Step 2

Place your L- Shaped bracket back side flush with your wall - your wooden valance with returns will cover and hide the sides of your blind making it nice and complete. You may however install your blind higher if you wish. Please make sure you allowed for higher installation when you did the measurements. Use a pencil and mark where to drill. You will see a top and bottom hole where you can fit the screw. Please note that blinds wider than 1200mm will need support bracket/s in the middle.

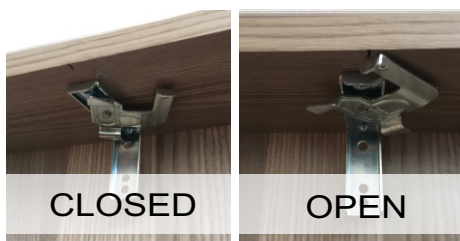

Step 3

Use a 6mm drill bit and drill where you marked with the pencil.

Step 4

With the holes now being drilled, insert the Fischer plugs. Insert the gold screw through the hole/s of the brackets and fix the brackets to the wall by using a phillips screw driver. TIP: its always better to use electric/cord drills for this step. Make sure that the screw is not fixed too tightly - one still needs the bracket to swivel slightly - see images below.



Step 6

Have all your brackets in the open position as per image on left. Place your blind over the brackets, push blind up and secure flush with the top recess of your wall. Now while holding your blind up with one hand, use the other hand to close your brackets one by one. Before letting go of your blind, test that the blind is nice and secure.



Above Left: Blind up against brackets - Open
Above Right: Blind fixed - Closed bracket

Step 7

With the blind now secured and fixed, lets operate the blind. Take all the cords and gently pull to the opposite site of your control. You will hear a small click, this is the cord lock being released. Now with your hand still in position, slowly let go of the cord. Please note the moment you move your hand back to the side of your control, your blind will lock.

Step 7

With the blind slats down, use the two single operating cords to tilt your slats by pulling them down. Please do not force it down when slats have already been tilted to a closed position.

Step 8

Congratulate yourself! you have now installed your own blind, with the above steps you now have a premium custom made blind with a full 2 year warranty. Now tell your friends about us, and we will be waiting for your next order.

Thank you

Team BuyMyBlindsOnline.co.za
011 868 1546

part of the GalaxyBlinds group